


One of the center leads of the coax cable is soldered to PC board ground and the other center lead is soldered to the RF output pad.

Coax cable braid soldered together and isolated from PC board

14 Turns of 25 ohm miniature coax cable wound evenly spaced on each toroid. Turns are counted as the coax cable is passed through the inside of the toroid.

Coax cable braid soldered to pad and center lead of the coax cable is soldered to the coax cable braid on the opposite toroid.

Coax cable braid soldered to pad and center lead of the coax cable is soldered to the coax cable braid on the opposite toroid.

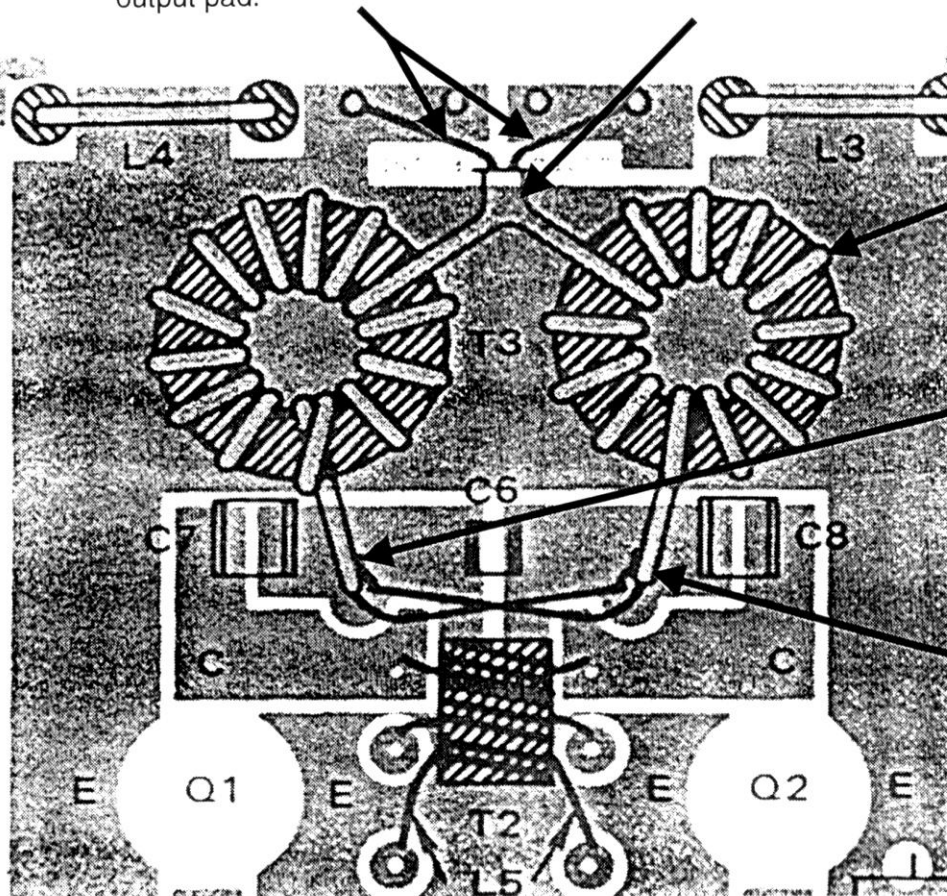

AN758 T3 Assembly